

## Front View



- ① Status temperature steps 1 and 2
- ② Status level steps 3 and 4
- ③ Temperature unit
- ④ Temperature display
- ⑤ Level display
- ⑥ Level unit
- ⑦ Operating elements

## Controller operation manual

Switching on:

After power-up PAN-1, device prints „PAN“, Version and last 4 digits of its ordernumber\*\*\*. After that actual values will be displayed.

Menue-stages

- View parameters
- set parameters

Operation-button:

- scrolling or change value with ▲ and ▼
- adjustment with E

## Parameter Overview


- S. e. t . . Access to parameter setting
- S. P. . x. Switching point for chanal x.
- r. P. . x. Reset point for chanal x.
- o. u. t . x. Output switching behaviour for Kanal 1-4.
- H. . n . o. Output hysteresis n.o. contact.
  - H. . n . c. Output hysteresis n.c. contact.
  - F. . n . o. Output window n.o. contact.
  - F. . n . c. Output window n.c. contact.
- \*\* L. . n . o. Output waterdetection n.o. contact.
- \*\* L. . n . c. Output waterdetection n.c. contact.
- E. F. . . Extended functions
- U. n . . t. Temperature units ( $^{\circ}\text{C}$  or  $^{\circ}\text{F}$ )
  - U. n . . L. Level units (mm or inch)
  - F. o . . x. Output switching behaviour step x in case of error
    - n . o. Output n.o. contact
    - n . c. Output n.c. contact
  - \* S. n . . x. Current source, span
  - \* O. F. . x. Current source, offset value
  - n. P. . . Virtual Zero point value for level (immersion depth)
- E. n. d . . End parameter setting



\* only PAN-1 with option „current source“



\*\* only PAN-1 with option „water detection“

\*\*\* not applicable to PAN-1 with „water detection“

## Menu structure

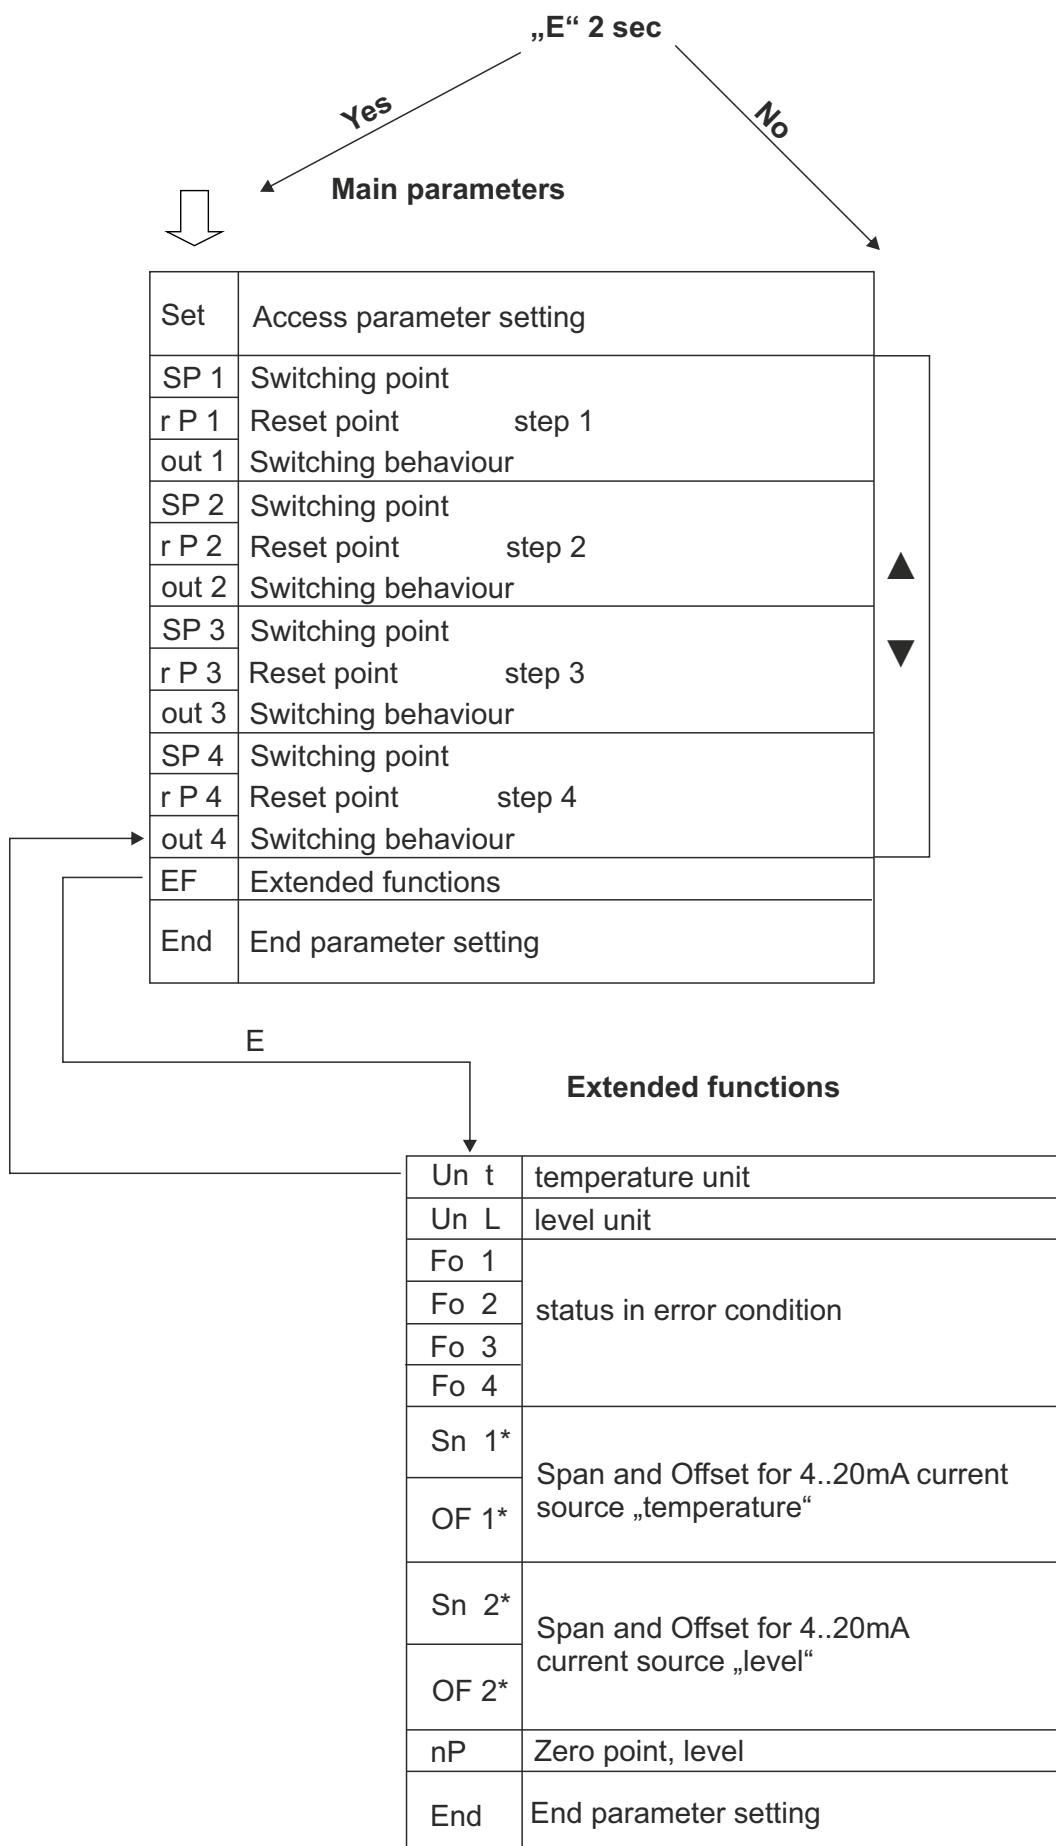

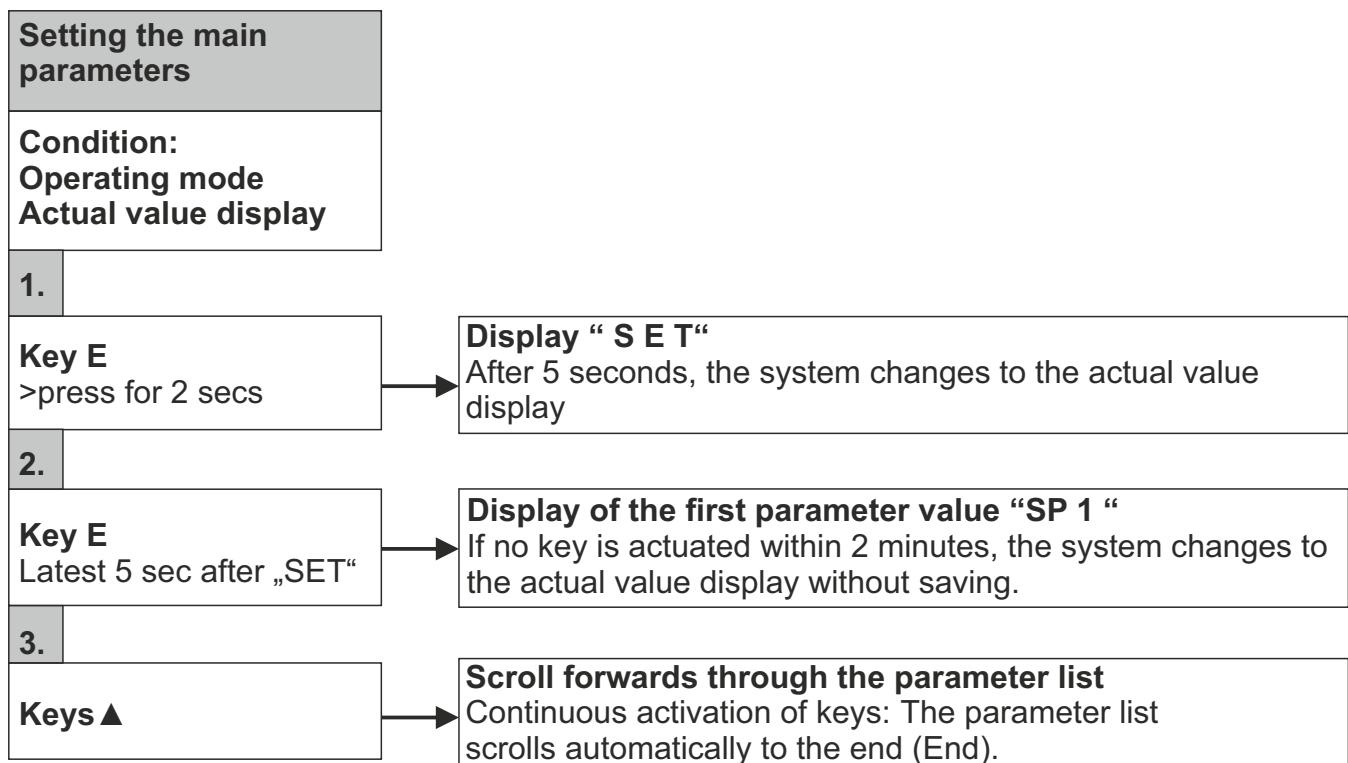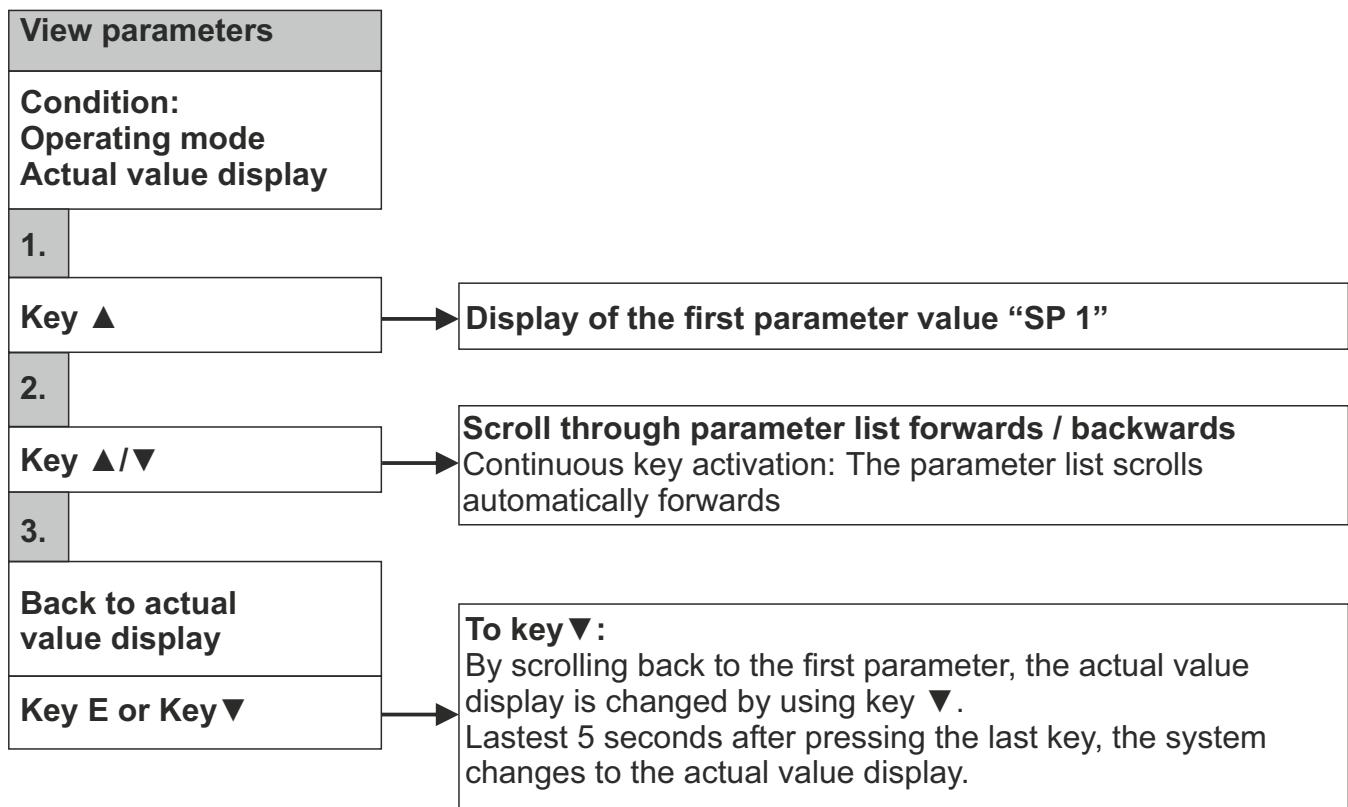

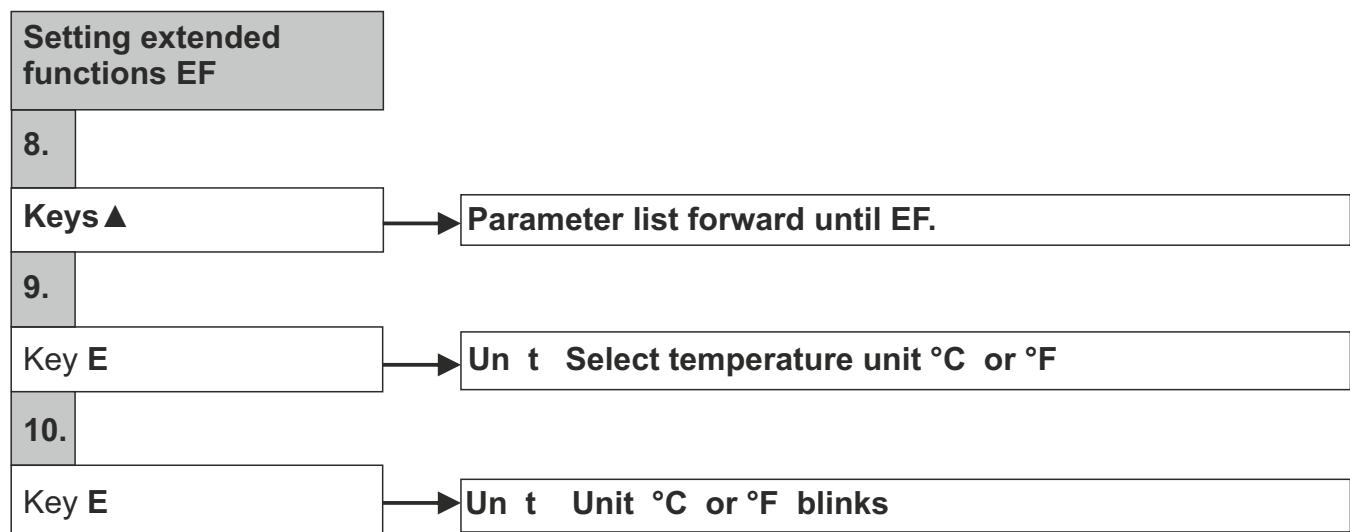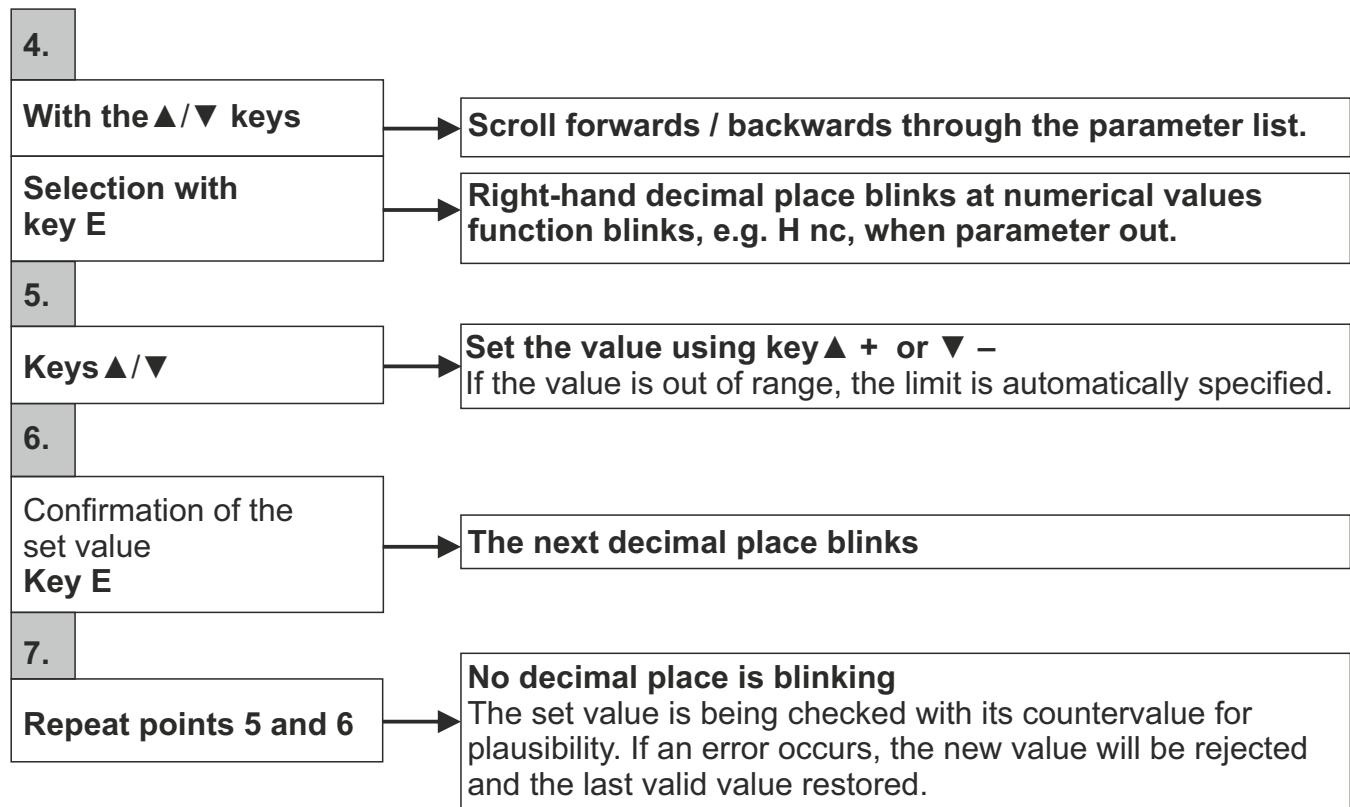

11.

Keys ▲/▼

→ Select unit °C or °F

12.

Key E

→ Selected unit is displayed

**Using the keys ▲ / ▼**

Additional functions (see menu structure) can be accessed in the extended menu. To set the functions, proceed as described under point 9 to point 12.

Key ▲

→ **Scroll forwards through parameter list as far as "E n d".**  
(In main parameters and extended functions)

12.

Key E

Continuous activation of key: the parameter list scrolls automatically to end (End).

→ **Actual value display****Malfunction**

Temperature sensor: Temperature actual value display indicates "Err" and the status LED's 1 + 2 blinks. The temperature outputs will be set in accordance with Fo 1 + Fo 2. The temperature power source will be set to value <=3,6 mA.

Level senor: Level actual value display of indicates "Err" and the status LED's 3 + 4 blink. The level outputs will be set in accordance with Fo 3 + Fo 4. The level power source gets adjusted to the value <=3,6 mA.

Output short circuit: The output gets deactivated and the appropriate status LED blinks. Cyclical examination whether the short-circuit is eliminated.